



PRONOLOGY rTB Quick Start Guide


To power up the rTB:

1. Push the Power button – the blue LED should light up
2. Connect the Thunderbolt 3 cable to your Mac or PC



Use the browser on the system and go to: <https://www.pronology.com/rtb-drivers/>


From the list, select the appropriate rTB driver download and launch.

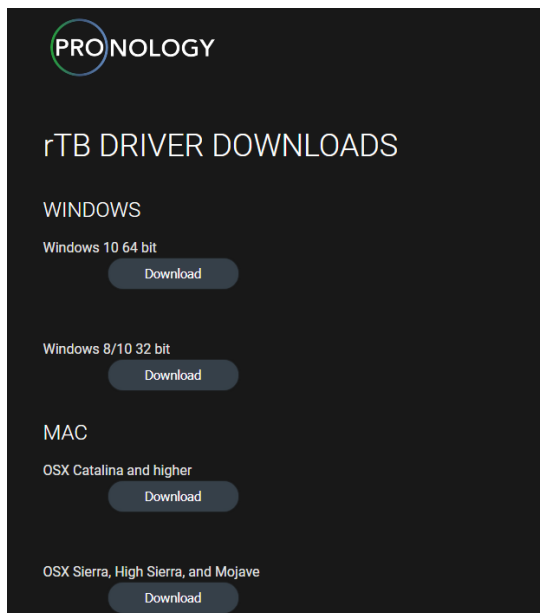

RAID Management Information

Launch Web Management GUI


For **Mac**, launch **MRAID** -> **ArcHTTP64** to get to the **RAID Management GUI**

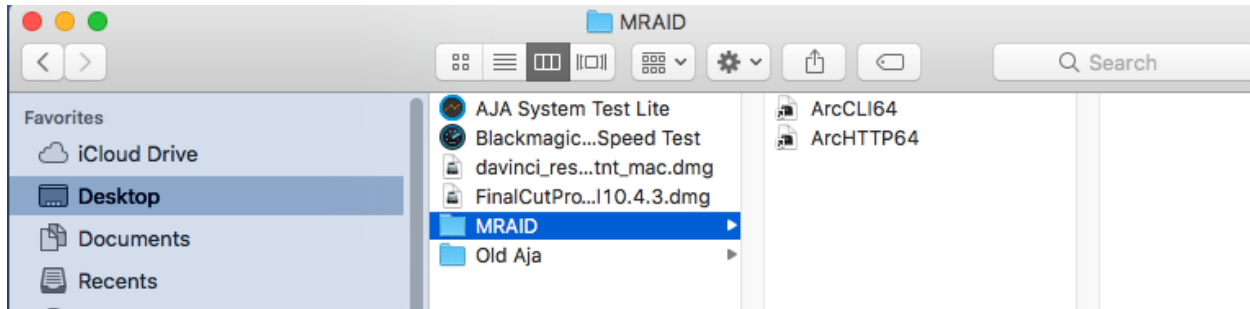

After the **ArcHTTP GUI** is open, double click on the "**ARC-1883LP Web Management**" to get into the Web GUI.

Login as "**admin / 0000** "

From here on, refer to the RAID User Manual for setup/monitoring operations.

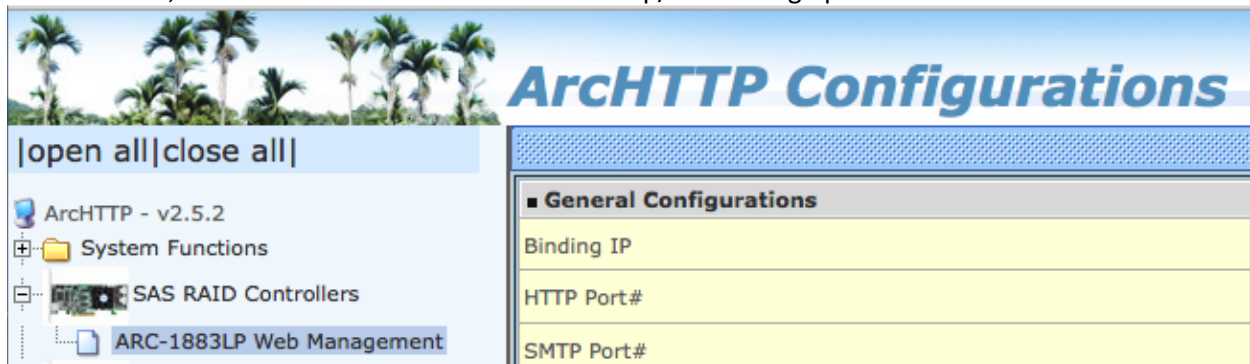

Other Methods To Web Management GUI

The OS Driver must be installed by **MRAID** utility, no other ways around it.

But after the OS driver is installed, there is another method that allows you to do **remote Web GUI Management**.

- Plug a RJ45 LAN cable into the **1883 RAID adapter**, and connect it with your local network.
- Install **ArcSAP** utility in any system (PC or Mac) in the same network. **ArcSAP** can be download from the same URL, just scroll down the bottom of the page.
- Launch **ArcSAP**, right click on "**Network**", and do "**Rescan Network**".

It should find the **1883 RAID Adapter**.

